



Nortel Communication Server 1000

# IP Phone 2001

## User Guide





# Revision history

## March 2006

Preliminary 4.08. This document is up-issued to support Nortel Communication Server 1000 Release 4.5.

**Note:** The “Security features” section has a new “Secure communication” subsection. The “View telephone information” section was updated. The LOGOS, copyright, and trademark information were updated.

## August 2005

Standard 4.00. This document is up-issued to support Nortel Communication Server 1000 Release 4.5.

## February 2005

Standard 3.00. This document is up-issued to support the 8.x Firmware Upgrade for IP Phones.

## September 2004

Standard 2.00. This document is up-issued to support Nortel Communication Server 1000 Release 4.0.

## June 2004

Standard 1.00. This document is issued to support Nortel Communication Server 1000 Release 4.0.



# Contents

<b>About the Nortel IP Phone 2001</b>	<b>9</b>
Basic features	9
Telephone controls	10
Telephone display	13
Call features and Flexible Feature Codes	14
Security features	14
Secure communication	14
Managing your Station Control Password (SCPW)	14
<b>Connecting the components</b>	<b>17</b>
Before you begin	17
Connecting the components of the phone	17
<b>Configuring options</b>	<b>19</b>
Using the Telephone Options menu	19
Adjusting the volume	21
Adjusting the display screen contrast	22
Selecting a language	22
Selecting date/time format	23
Selecting local dialpad tone	24
Selecting a Ring type	24
Viewing telephone information	25
<b>Making a call</b>	<b>26</b>
Using off-hook dialing	26
Using on-hook dialing	27
Using Predial	28
Activating Ring Again	29
Using Last Number Redial	30

Using Speed Call .....	31
Making a System Speed Call .....	32
<b>Answering a call .....</b>	<b>34</b>
<b>While on an active call .....</b>	<b>35</b>
Placing a call on hold .....	35
Transferring a call .....	35
Using Timed Reminder Recall .....	36
Using Call Park .....	37
Recording a Calling Party Number .....	39
Tracing a malicious call .....	39
<b>While away from your desk .....</b>	<b>41</b>
Using Call Forward .....	41
Using Internal Call Forward .....	42
Using Remote Call Forward .....	43
Securing your telephone .....	45
<b>Talking with more than one person .....</b>	<b>47</b>
Setting up a conference call .....	47
Using Group Call .....	48
<b>Working without interruption .....</b>	<b>50</b>
Using Make Set Busy .....	50
<b>Additional calling features .....</b>	<b>51</b>
Using Call Page Connect to make an announcement .....	51
Charging a call or charging a forced call .....	52
Using Enhanced Override .....	55
Using Forced Camp-on .....	56
Overriding a busy signal .....	57

Using Privacy Release .....	57
Using Radio Page .....	58
<b>Additional phone features .....</b>	<b>61</b>
Using Virtual Office .....	61
Logging in to Virtual Office .....	62
Using Virtual Office on your remote telephone .....	63
Using Virtual Office on your office telephone .....	65
Logging out of Virtual Office .....	66
Troubleshooting Virtual Office .....	67
Using Media Gateway 1000B .....	69
Using Test Local Mode .....	70
Using Resume Normal Mode .....	70
Troubleshooting MG 1000B .....	71
<b>Using Hospitality features .....</b>	<b>72</b>
Configuring Automatic Wake-Up .....	72
<b>Using External Server Applications .....</b>	<b>74</b>
<b>Flexible Feature Codes (FFCs) .....</b>	<b>75</b>
<b>Terms you should know .....</b>	<b>77</b>
<b>Index .....</b>	<b>83</b>





# About the Nortel IP Phone 2001

The Nortel IP Phone 2001 brings voice and data to the desktop by connecting directly to a Local Area Network (LAN) through an Ethernet connection.

**Note 1:** All features are not available on all telephones. Consult your system administrator to verify which features are available for your use.

**Note 2:** In this guide, soft key labels display directly above the soft key.

## Basic features

---

The IP Phone 2001 supports the following features:

- four soft keys (self-labeled) providing access to a maximum of ten features

**Note:** Some IP Phone 2001 phones are not configured to support soft key functionality. Consult your system administrator.

- multi-field LCD display screen
- speaker for on-hook dialing or on-hook listening
- volume control bar for adjusting ringer, speaker, and handset volume
- two specialized fixed keys:
  - Services
  - Message (Inbox)
- three call processing fixed keys:
  - Line
  - Hold
  - Goodbye
- automatic network configuration

Figure 1 illustrates the IP Phone 2001.

**Figure 1: IP Phone 2001**



## Telephone controls

**Note:** Some IP Phone 2001 phones come with optional key caps. Text in parenthesis indicates labels appearing on the key caps. For example, (Goodbye).



Use the **Volume control** bar to adjust the volume of the ringer, handset, and speaker. Press the right side of the rocker bar to increase volume; press the left side to decrease volume.



(Line)

Use the **Line** (DN) key to access the single line and activate on-hook dialing. No status icon or LED is provided.



**(Goodbye)**

Use the **Goodbye** key to terminate an active call.



**(Hold)**

Press the **Hold** key to put an active call on hold. Press the **Line (DN)** key to return to the caller on hold.



**(Msg/Inbox)**

Press the **Message (Inbox)** key to access your voice mailbox.



Use the **Navigation** keys to scroll through menus and lists appearing on the LCD display screen.



**(Services)**

Press the **Services** key and use the **Navigation** keys to access the following items:

- Telephone Options:
  - Volume adjustment
  - Contrast adjustment
  - Language
  - Date/Time
  - Local DialPad Tone
  - Ring type
  - Set Info
- Password Admin:
  - Station Control Password
- Virtual Office Login and Virtual Office Logout (if Virtual Office is configured)



Continued

Fwd



▶ Fwd



**Note 1:** Press the **Services** key to exit from any menu or menu item.

**Note 2:** The Password Admin menu is not available on all IP Phone 2001 phones. Consult your system administrator.

Soft keys (self-labeled) are located below the LCD screen. The LCD screen above the key changes, based on the active feature.

**Note:** When a triangle appears before a key label, the feature is active.

When a message has been left for the user, the **Message waiting indicator** flashes. Also, this indicator flashes when the telephone ringer is ON.


## Telephone display

The IP Phone 2001 has two display areas:

- The upper display area contains single-line information for items such as the caller number, caller name, feature prompt strings, user-entered digits, date and time information, and telephone information.
- The lower display area provides soft key label information.

**Figure 2** shows the idle LCD screen.

 **Figure 2: IP Phone 2001 screen**

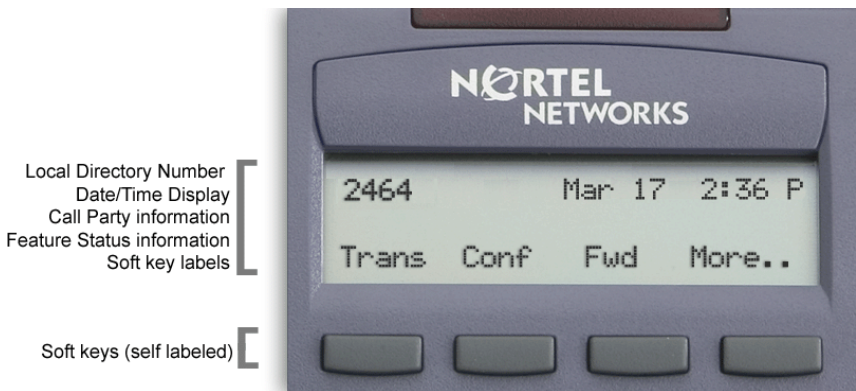

## Call features and Flexible Feature Codes

---

System administration is required for call features and Flexible Feature Codes (FFCs). Contact your system administrator to configure these features and codes on your telephone.

Call features and FFCs must be assigned to your telephone and supported by system software.


## Security features

---

This section describes the following features, which are designed to enhance the security of your IP Phone 2001:

- Secure communications
- Managing your Station Control Password

### Secure communications

Your IP Phone 2001 supports secure communication using SRTP and a Pre-Shared Key (PSK) media encryption feature. If the feature is enabled, a security icon (  ) appears on the screen when your call is secured using SRTP (PSK). Contact your system administrator to find out if this feature is enabled on your phone.

### Managing your Station Control Password

Your Station Control Password (SCPW) enables the following security features:

- Electronic Lock to prevent others from making calls from your telephone.
- Password-protected telephone features (for example, Remote Call Forward).

Your initial SCPW is defined by your system administrator. Contact your system administrator for detailed information.

## To change your password (SCPW):



(Services)

1. Press the **Services** key.



2. Press the **Navigation** keys to scroll and highlight **Password Admin**.

Select



3. Press the **Select** soft key.



4. Use the dialpad to enter your password at the prompt.



5. Press the **Navigation** keys to scroll and highlight **New Password**.

Select



6. Press the **Select** soft key.



7. Use the dialpad to enter the new password.

Select



8. Press the **Select** soft key to accept the new password.

**Note:** If you have been locked out of your IP Phone 2001, or have forgotten your SCPW, contact your system administrator.



# Connecting the components

## Before you begin

---

**CAUTION**

Damage to equipment


Do not plug the IP Phone 2001 into a regular telephone jack. This results in severe damage to the IP Phone. Consult your system administrator to ensure that you plug your telephone into a 10/100BaseT Ethernet jack.

## Connecting the components of the phone

---

1. Connect one end of the handset cord to the handset jack (identified with a handset icon) on the back of the telephone. Connect the other end to the jack on the handset.
2. Connect one end of the CAT-5 line cable to the LAN Ethernet port located on the back of the telephone (identified with a LAN icon). Plug the other end of the CAT-5 line cable into the IP network.
3. Contact your installation technician for the proper power option. This telephone can be powered by an AC adapter or over a LAN.
4. Thread the cord around the strain relief, retaining hook, and channel provided for a secure power connection.
5. Secure the telephone footstand to the telephone base.

 **Figure 3: IP Phone 2001 connections**

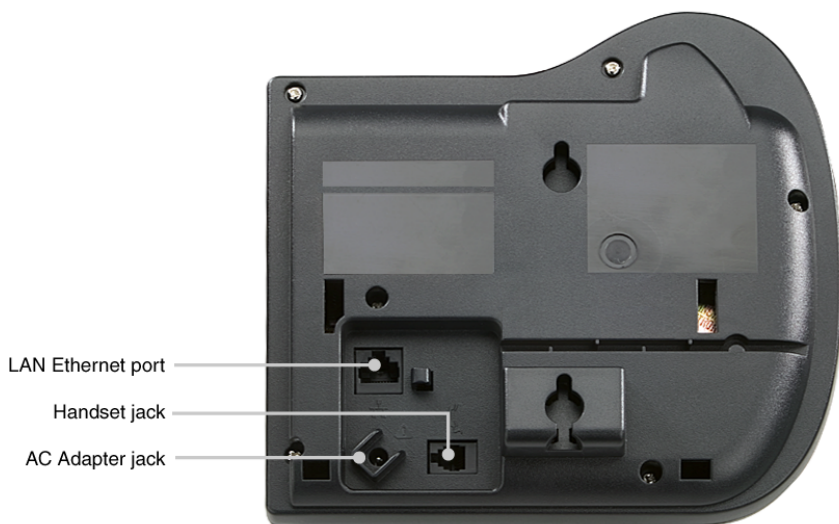

# Configuring options

The IP Phone 2001 **Services** menu lists the following submenus:

- The **Telephone Options** menu enables you or your system administrator to configure telephone preferences. **Figure 4** illustrates the choices available in this menu.
- The **Password Admin** menu enables you or your system administrator to change the Station Control Password.
- The **Virtual Office Login** and **Test Local Mode** (for Branch Office) menus are listed when an IP Phone 2001 Class of Service is configured for Virtual Office and Branch Office. For more information, see page 61.

**Note:** The **Password Admin**, **Virtual Office Login**, and **Test Local Mode** menus are not available on all IP Phone 2001 phones. Consult your system administrator.

**Figure 4: Telephone Options menu**

Volume adjustment...	Local DialPad Tone
Contrast adjustment	Ring type...
Language...	Set Info
Date/Time...	

## Using the Telephone Options menu

Use the Telephone Options menu to access the following:

- “Adjusting the volume” on page 21
- “Adjusting the display screen contrast” on page 22
- “Selecting a language” on page 22
- “Selecting date/time format” on page 23
- “Selecting local dialpad tone” on page 24

- “Selecting a Ring type” on page 24
- “Viewing telephone information” on page 25

When an option has a sublist, an ellipsis (...) appears after the option.

### To use the Telephone Options menu:



1. Press the **Services** key.

 


2. Press the **Navigation** keys to scroll and highlight **Telephone Options**.

Select



3. Press the **Select** soft key.



4. Press the **Navigation** keys to scroll and highlight an option (for example, **Language...**).

Select



5. Press the **Select** soft key. The display provides information required to adjust your selection.

Select



or

Cancel



6. Choose one of the following:
  - Press the **Select** soft key to save changes and return to the **Telephone Options** menu.
  - Press the **Cancel** soft key to keep existing configurations.

## Adjusting the volume

To adjust the volume, press the **Services** key and select **Volume adjustment...** from the **Telephone Options** menu. Choose one of the following:

- Ringer
- Handset
- On-hook dialing/listen
- Buzzer

**To adjust the volume:**



1. Press the **Navigation** keys to scroll and highlight one of the following:

- **Ringer**
- **Handset**
- **On-hook dialing/listen**
- **Buzzer**

Select



2. Press the **Select** soft key.

Lower

Higher

 


or



3. Choose one of the following to increase or decrease the volume:

- Press the **Lower/Higher** soft keys.
- Press the **Navigation** keys.




4. Choose one of the following:
  - Press the **Select** soft key to save the volume level and return to the **Telephone Options** menu.
  - Press the **Cancel** soft key to keep existing configurations.


## Adjusting the display screen contrast

 To adjust the LCD display screen contrast, press the **Services** key and select **Contrast adjustment** from the **Telephone Options** menu.

**To adjust the display screen contrast:**

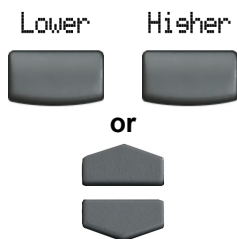

 1. To increase or decrease the display contrast level, choose one of the following:
  - Press the **Lower/Higher** soft keys.
  - Press the **Navigation** keys.




2. Choose one of the following:
  - Press the **Select** soft key to save the contrast level and return to the **Telephone Options** menu.
  - Press the **Cancel** soft key to keep existing configurations.

## Selecting a language

 The display can show information in any of several languages. To choose a language, press the **Services** key and select **Language...** from the **Telephone Options** menu.

**To select a language:**


1. Press the **Navigation** keys to scroll and highlight the desired language (for example, German [Deutsche]).



2. Choose one of the following:
  - Press the **Select** soft key to save the language and return to the **Telephone Options** menu.
  - Press the **Cancel** soft key to keep existing configurations.

**Selecting date/time format**

 There are several date/time formats, based on the 12-hour clock or the 24-hour clock. To select a date/time format, press the **Services** key and select **Date/Time...** from the **Telephone Options** menu.

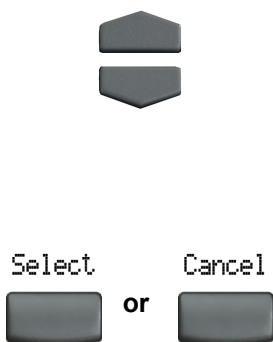**To select a date/time format:**

1. Press the **Navigation** keys to scroll and highlight the desired format. Sample formats appear in the upper right-side of the display area.
2. Choose one of the following:
  - Press the **Select** soft key to save the format and return to the **Telephone Options** menu.
  - Press the **Cancel** soft key to keep existing configurations.

### Selecting local dialpad tone

Use the Local DialPad Tone option if you want the telephone dialing keys to produce a sound when you press them. Your choices are:

- Dual Tone Multi-Frequency (DTMF) sounds
- a single tone
- no sound.

To choose a local dialpad tone, press the **Services** key and select **Local DialPad Tone** from the **Telephone Options** menu.

**To select local dialpad tone:**



1. Press the **Navigation** keys to scroll and highlight one of the following dialpad tones:

- **None** to disable all tones.
- **Short Click** to enable a single tone for all keys.
- **DTMF** to turn on a separate DTMF tone for each key.

Select



or

Cancel



2. Choose one of the following:
  - Press the **Select** soft key to save the tone selection and return to the **Telephone Options** menu.
  - Press the **Cancel** soft key to keep existing configurations.

### Selecting a Ring type

Use the Ring type option to configure the telephone's ring tone. To choose a ring type, press the **Services** key and select **Ring type...** from the **Telephone Options** menu.



## To select a ring type:



1. Press the **Navigation** keys to scroll and highlight one of the ring types.

Ring type 3

Play



2. Press the **Play** soft key to sample the ring tone.

Select



or

Stop



or

Cancel



3. Choose one of the following:
  - Press the **Select** soft key to save the ring type and return to the **Telephone Options** menu.
  - Press the **Stop** soft key and use the **Navigation** keys to select a different ring type.
  - Press the **Cancel** soft key to keep existing configurations.

## Viewing telephone information

The Set Info option displays the following telephone-specific information:

- General Information
- Set IP Information
- Ethernet Information
- Server Information

To view telephone information, press the **Services** key, select **Telephone Options**, and then select **Set Info** from the menu.

To view telephone information:



1. Press the **Navigation** keys to scroll through the list to view telephone information.

Cancel



2. Press the **Cancel** soft key to return to the **Telephone Options** menu.

## Making a call

This section describes the various methods that you can use to make a call:

- “Using off-hook dialing” on page 26
- “Using on-hook dialing” on page 27
- “Using Predial” on page 28
- “Activating Ring Again” on page 29
- “Using Last Number Redial” on page 30
- “Using Speed Call” on page 31
- “Making a System Speed Call” on page 32

## Using off-hook dialing

---

 
Use the off-hook dialing option to dial the number after you have lifted the handset.



1. Lift the handset.



2. Dial the number.



or




(Goodbye)

3. To terminate the call, choose one of the following:
  - Replace the handset into the cradle.
  - Press the **Goodbye** key.

## Using on-hook dialing

 Use on-hook dialing to dial the number before lifting the handset.

1. Leave the handset in the cradle.



(Line)

 
2. Press the **Line** (DN) key.



3. Dial the number when the dial tone sounds.



4. When the called party answers, lift the handset.

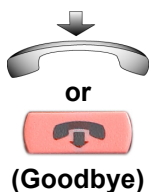


5. To terminate the call, choose one of the following:
  - Replace the handset into the cradle.
  - Press the **Goodbye** key.

## Using Predial

 Use the Predial feature to enter, preview, and edit numbers before dialing.

### To use Predial:

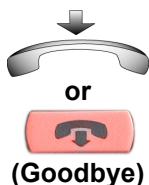


1. Without selecting the **Line** (DN) key, enter the number to be dialed.
2. Press the **Line** (DN) key to dial the number.
3. Lift the handset when the called party answers.
4. Choose one of the following to terminate the call:
  - Replace the handset into the cradle.
  - Press the **Goodbye** key.

**To edit a Predial number:**

 Clear



Delete



(Line)

1. Without selecting the **Line** (DN) key, enter the number to be dialed.
2. Choose one of the following:
  - To erase all numbers, press the **Clear** soft key. Re-enter numbers to be dialed.
  - To change numbers one-at-a-time, press the **Delete** soft key to backspace. Re-enter a new number.
3. Press the **Line** (DN) key to dial the number.

## Activating Ring Again

---

Use the Ring Again feature if you receive a busy tone or if there is no answer. Your IP Phone rings when the person you called becomes available. Ring Again automatically redials the number.

**To activate Ring Again:**

1. Dial a number and receive a busy tone or no answer.

RnsAen



or



2. Choose one of the following:
  - Press the **Ring Again** soft key.
  - Enter the **Ring Again Activate** FFC.

### To call a Ring Again party when you receive notification:



1. After receiving the notification tone, lift the handset.

RnsAen



2. Press the **Ring Again** soft key to automatically dial the number.

### To deactivate Ring Again before notification:

Choose one of the following:

RnsAen



or



 
- Before hearing the notification tone, press the **Ring Again** soft key a second time.
- Enter the **Ring Again Deactivate** FFC.

## Using Last Number Redial

Use the Last Number Redial feature to automatically redial the last dialed number.

**To use Last Number Redial with the handset:**

1. Lift the handset.




(Line)

2. Press the **Line** (DN) key.

**To use Last Number Redial without lifting the handset:**

 (Line)



(Line)

Without lifting the handset, press the **Line** (DN) key twice (the last number dialed is automatically redialed).

## Using Speed Call

---

Use the Speed Call feature to place internal and external calls by dialing a one-, two-, or three-digit code.

**To create a Speed Call number:**

SpCt1



1. Press the **Speed Call Controller** soft key. The triangular icon flashes, indicating programming mode.



2. At the prompt:
  - Enter a one-, two-, or three-digit code (0-999).
  - If required, enter the access code (for example, "9").
  - Enter the telephone number (internal, external, or long-distance number).

SpCt1



3. Press the **Speed Call Controller** soft key again to save the code and number. The flashing icons turns off.

### To make a Speed Call:



1. Lift the handset.

SpCt1



2. Press the **Speed Call Controller** soft key.



3. Dial the **Speed Call** code to automatically dial the number.

## Making a System Speed Call

 
Use the System Speed Call feature to dial Speed Call codes that override dialing restrictions placed on your telephone.



## To make a System Speed Call:



1. Lift the handset.



2. Choose one of the following:

- Press the **System Speed Call (SScUsr)** soft key.
- Press the **System Speed Call Controller (SScCtl)** key.



3. Dial the **Speed Call** code to automatically dial the number.

# Answering a call

Each incoming call causes the telephone to ring and the **Message Indicator** lamp to flash.

**To answer a call:**



Lift the handset.

**Note:** Do not use the **Line** (DN) key to answer a call.

# While on an active call

Use the following features during an active call:

- “Placing a call on hold” on page 35
- “Transferring a call” on page 35
- “Using Timed Reminder Recall” on page 36
- “Using Call Park” on page 37
- “Recording a Calling Party Number” on page 39
- “Tracing a malicious call” on page 39

## Placing a call on hold

---

Use the Hold feature when talking on one line and another call arrives on a second line. Retain the original call by putting it on hold and then answer the second call.

To place a call on hold:



(Hold)

Press the **Hold** key.

To retrieve a call on hold:



(Line)

Press the **Line** (DN) key.

## Transferring a call

---

Use the Transfer feature to redirect a call to the appropriate person.

### To use the Transfer feature to direct a call to a third party:

Trans



1. Press the **Transfer** soft key. The other party is on hold and a dial tone sounds.



2. Dial the DN number to which the call is transferred.

Trans



3. When that number rings or a person answers, press the **Transfer** soft key to connect the calling party.

### To return to the original call, if the transfer is incomplete:



(Line)

If the person called is not available, press the **Line** (DN) key to reconnect to the original call.

## Using Timed Reminder Recall

Use the Timed Reminder Recall feature to receive a reminder tone when a transferred call is not answered.

### To activate Timed Reminder Recall:

 
Trans



1. Press the **Transfer** soft key. The call is put on hold.



2. Dial the number to which the call is being transferred.

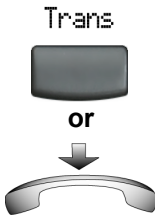

3. Choose one of the following to start the recall timer:
  - Press the **Transfer** soft key again.
  - Replace the handset before the extension answers.

If the transfer is complete, the recall timer stops.

**If the transferred call is not answered, your telephone rings:**



1. Lift the handset to reconnect to the original caller.



2. Choose one of the following:
  - Press the **Transfer** soft key and repeat the transfer (to a different DN).
  - If the transfer is picked up while you are on the line, press the **Goodbye** key to complete the transfer.

## Using Call Park

Use the Call Park feature to hold temporarily (park) and retrieve a call from any telephone. Using Call Park does not tie up a line and, when configured network-wide, can be used across networks. A **System Park Extension** can be configured to automatically park most calls.

### To park a call on the System Park DN or your own DN:



During an active call, press the **Park** soft key twice.

**Note:** By default, the call is parked on your DN unless a **System Park** is enabled to automatically park calls on the system.

### To park a call on a DN other than the System Park DN or your own DN:



1. Press the **Park** soft key.



2. Dial the DN where you want to park the call.



3. Press the **Park** soft key.

### To retrieve a parked call:



1. Lift the handset.



2. Press the **Park** soft key.



3. Dial the DN where you parked the call.

**Note:** If a parked call is not retrieved within a specified time period, it rings back to your telephone or the attendant.

## Recording a Calling Party Number

Use the Calling Party Number feature to record a caller's number, or to charge a call to an account number, during an established call.

**To record a caller's number for accounting purposes:**

CParty



1. Press the **Call Party** soft key. The caller is placed on hold.



2. Dial a charge account number or the caller's number.

**Note:** For information on using the **Charge** key, see "Charging a call or charging a forced call" on page 52.

CParty



3. Press the **Call Party** soft key to return to the call.

## Tracing a malicious call

Use the Call Trace feature to trace nuisance calls within your system.

**Note:** This is not a default feature. Contact your system administrator to configure this feature on your telephone.

### To activate Call Trace:

Trans



Conf



1. Choose one of the following:
  - Press the **Transfer** soft key.
  - Press the **Conference** soft key.
2. Dial the **SPRE code** followed by **83** or enter the **Call Trace** FFC to automatically reconnect.

**Note:** Contact your system administrator for the Call Trace feature SPRE code.



# While away from your desk

Use the following features when you are away from your desk;

- “Using Call Forward” on page 41
- “Using Internal Call Forward” on page 42
- “Using Remote Call Forward” on page 43
- “Securing your telephone” on page 45

## Using Call Forward

---

Use the Call Forward feature to direct incoming calls to ring on another line (DN). If the telephone is in the process of ringing, that call cannot be forwarded.

**To forward your calls or change the forward number:**

Fwd



1. Press the **Forward** soft key.



2. Dial the DN where you want to forward your calls.

Fwd



3. Press the **Forward** soft key.

**To deactivate Call Forward:**

Fwd



Press the **Forward** soft key.

To reinstate Call Forward to the same number:



Press the **Forward** soft key twice.

## Using Internal Call Forward

---

Use Internal Call Forward to accept only calls originating at internal DNs to ring at another DN. Calls originating outside your telephone system still ring at your telephone. Current incoming calls cannot be forwarded.

 
To activate Internal Call Forward:



1. Lift the handset and enter the **Internal Call Forward Activate** FFC.



2. Dial the DN to which your internal calls will be forwarded.



3. Hang-up.

To deactivate Internal Call Forward:



Lift the handset and enter the **Internal Call Forward Deactivate** FFC.

## Using Remote Call Forward

Use Remote Call Forward (from any phone other than your own) to forward your calls to any DN.

### To activate Remote Call Forward:



1. Lift the handset.



2. If calling from a telephone outside the system, dial your direct system access number and wait for dial tone.



3. Dial the **Remote Call Forward Activate** FFC to activate the feature.



4. Dial your Station Control Password. A dial tone sounds.



5. Choose one of the following:
  - Dial your DN.
  - To forward calls to the previous call forward telephone number, press the **#** key. (Do not perform steps 6 and 7).



6. Dial the number to which calls are being forwarded. If calls are forwarded to an invalid number, a fast busy signal sounds.



7. Press the # key.

### To deactivate Remote Call Forward:



1. Lift the handset.



2. If calling from a telephone outside the system, dial the direct system access number and wait for the dial tone.



3. Dial the **Remote Call Forward Deactivate** FFC.



4. Dial your **Station Control Password**.



5. After hearing the dial tone, dial your DN.



6. Press the # key.

## Securing your telephone

The Electronic Lock feature is controlled using your Station Control Password. To change your **Station Control Password**, please refer to “Security features” on page 14.

### To lock your telephone:



1. Lift the handset.



2. Dial the **Electronic Lock Activate** FFC.



3. Dial your **Station Control Password**.



(Goodbye)

 
4. Choose one of the following:

- If dialing locally, press the **Goodbye** key.

- If dialing the FFC remotely, dial your DN.



### To unlock your telephone:



1. Lift the handset.



2. Dial the **Electronic Lock Deactivate** FFC.



3. Dial your **Station Control Password**.



**(Goodbye)**

4. Choose one of the following:

- If dialing locally, press the **Goodbye** key.
- If dialing the FFC remotely, dial your DN.



# Talking with more than one person

Use the following features to enable conversations between more than two people:

- “Setting up a conference call” on page 47
- “Using Group Call” on page 48

## Setting up a conference call

Use the Conference feature to set up a conference call. The maximum number of people the conference feature supports is either three or six, depending on the configuration of your telephone.

**To set up a conference call:**

Conf



1. While on a call, press the **Conference** soft key to place the party on hold. You receive dial tone.



2. Dial the number of the person you want to add to the conference call. You can talk privately to the person you are adding at this time.

Conf



3. Press the **Conference** soft key a second time to conference all parties together.

If the person you attempt to add to the conference is unavailable:



(Goodbye)

1. Press the **Goodbye** key.



(Line)

2. Press the **Line** (DN) key to return to your original call.

## Using Group Call

---

Use the Group Call feature to automatically call members of a predefined group, one at a time, until they all answer.

To call group members:



1. Lift the handset.



2. Enter the **Group Call** FFC.
  - The feature automatically calls all group members.
  - The telephone numbers of the group members display as they answer.
  - When a person in your group is on a conference call or another group call, they are not connected to your group call.
  - After everyone in the group has answered, only the person who made the group call can put the call on hold.



**To answer a Group Call:**



Lift the handset.

**Note:** When you answer a Group Call, three 10-second tones notify you that there is a group call on your extension.

**To end a Group Call:**



**(Goodbye)**

Press the **Goodbye** key.

**Note:** When the person who made the group call disconnects, the call terminates for all members of the group. However, the members of the Group Call can disconnect from the call and not affect other members on the call.

# Working without interruption

This section describes the Activating Make Set Busy feature, which provides uninterrupted work time.

## Using Make Set Busy

---

Use the Make Set Busy feature to make your telephone appear busy to all callers.

### To activate Make Set Busy:



1. Lift the handset.



2. Enter the **Make Set Busy Activate** FFC.

### To deactivate Make Set Busy:



1. Lift the handset.



2. Enter the **Make Set Busy Deactivate** FFC.

# Additional calling features

The following calling features are available on some IP Phone 2001 phones. Contact your system administrator to find out if they are available to you:

 
- “Using Call Page Connect to make an announcement” on page 51
- “Charging a call or charging a forced call” on page 52
- “Using Enhanced Override” on page 55
- “Using Forced Camp-on” on page 56
- “Overriding a busy signal” on page 57
- “Using Privacy Release” on page 57
- “Using Radio Page” on page 58

## Using Call Page Connect to make an announcement

---

Use the Call Page Connect feature to make an announcement over a paging system.

**To use Call Page:**



1. Lift the handset.



2. Dial the **Page Trunk Access Code** to complete the connection to the page system.

3. Make your announcement.



(Goodbye)

4. Press the **Goodbye** key.

## Charging a call or charging a forced call

Use the Call Charge feature to charge a call to a specific account. The Forced Charge feature charges long-distance calls from a telephone restricted to local calls.

**To charge a call before you dial:**



1. Lift the handset.

Charge



2. Choose one of the following:
  - Press the **Charge** soft key.
  - Dial the **Call Detail Recording** FFC.



3. Dial the charge account number.



4. When the dial tone sounds, dial the number.

**To charge a call in progress:**

Trans

or

Conf



1. Choose one of the following:
  - Press the **Transfer** soft key.
  - Press the **Conference** soft key.

 
Charge



2. Choose one of the following:
  - Press the **Charge** soft key.
  - Dial the **Call Detail Recording** FFC.



3. Dial the charge account number.



(Line)

4. Press the **Line** (DN) key to return to the call.

## To charge a call to an account when you transfer a call:

Trans



1. Press the **Transfer** soft key. The call is placed on hold.



2. Dial the **Call Detail Recording** FFC.



3. Dial the charge account number.



4. After the dial tone, dial the number to where the call is to be transferred.

Trans



5. Press the **Transfer** soft key when you hear the telephone ring.

**Note:** You can talk privately to the person at the transfer number before you press the **Transfer** key.

### To charge a call to an account when you add someone to a conference call:

Conf



1. Press the **Conference** soft key. The call is placed on hold.



2. Dial the **Call Detail Recording** FFC.



3. Dial the charge account number.



4. Dial the number of the person you want to add to the conference.

Conf



5. Press the **Conference** soft key.

## Using Enhanced Override

Use the Enhanced Override feature to override an active call after you attempt a Forced Camp-on. Use Enhanced Override to make a simple call or a consultation call, such as placing a call on hold and calling another party.

### To use Enhanced Override:



You receive a busy signal after dialing a telephone number:



1. Enter the **Override** FFC to initiate a Forced Camp-on.

- If either person on the call disconnects at this time, you receive an overflow (fast busy/engaged) signal.



2. Enter the **Override** FFC again.

- The other two persons on the call receive an override tone and a conference call is established between the three of you. If anyone disconnects, the other two persons remain connected.

### To disconnect Enhanced Override:



(Goodbye)

Press the **Goodbye** key.

## Using Forced Camp-on

Use the Forced Camp-on feature to automatically ring another telephone (internal or external) immediately after that telephone disconnects from its current call.

### To use Forced Camp-on:



You receive a busy signal after dialing a telephone number.



1. Enter the **Override** FFC to initiate a Forced Camp-on.

**Note:** The person you called receives a tone. You receive a ring/ringback signal or a busy/engaged signal, depending on the options chosen. You are now camped-on to the number you dialed.

2. Hang-up the telephone.
3. When the person you called finishes their call, your telephone automatically dials the number. Both telephones ring.

### To answer a call camped-on to your extension:



When the telephone rings, lift the handset.

**Note:** You can program your telephone for either Camp-on or Call Waiting, but not both.



## Overriding a busy signal

Use the Override feature to override a busy signal and interrupt another call.

### To override a busy/engaged signal:

You dial a telephone number and receive a busy signal.



Enter the **Override** FFC.

The people in the targeted call receive a tone for approximately one second. After the Override feature joins you to their call, a short tone repeats every 16 seconds.

### To end the connection:



Press the **Goodbye** key.

## Using Privacy Release

Use the Privacy Release feature to enable one or more people who share your DN to join a call.

### To use Privacy Release on an established call:



Press the **Privacy Release** soft key during a call.

A person joins the call by pressing the shared number (DN) key on their telephone (Multiple Appearance DN feature).

## Using Radio Page

Use the Radio Page feature to page a person and stay on the line until they answer. The paged person answers the call after entering a special Page Meet-me code from any telephone.

### To use Automatic Preselection (Meet-me page):



1. Lift the handset.



2. Dial the **Radio Paging Access** FFC.  
The paging tone sounds (two beeps followed by a dial tone).



3. Dial the number of the party you want to page. After dialing, the ringback tone sounds.

**Note:** The paged person can use any telephone to enter a **Radio Paging Answer** FFC, plus their own DN number.



(Goodbye)

4. If your call goes unanswered for a preset time period and a 15-second high pitched tone sounds followed by silence, press the **Goodbye** key or replace the handset.

**To use Automatic Post selection:**

The called party is either busy on the telephone or away from the desk. To page the called party, there is no need to redial the number of the called party.

RadPae



1. Press the **Radio Page** soft key. A special dial tone sounds.



2. Dial the **Radio Paging Access** FFC. The ringback tone sounds.

 
**Note:** The paged person can use any telephone to enter a **Radio Paging Answer** FFC, plus their own DN number.

**(Goodbye)**

3. If your call goes unanswered for a preset time period and a 15-second high-pitched tone sounds followed by silence, press the **Goodbye** key or replace the handset.

**To answer a Radio Page:**

If you carry a Radio Pager, a page indicates that someone dialed your line (DN). If the Radio Page system is configured up to function in Meet-me mode, you can answer the page call from any telephone.



1. Lift the handset.



2. Dial the **Radio Page Answer** FFC. The paging tone sounds.



3. Dial your own DN to connect to the paging caller. If the caller has hung up, a steady, high-pitched (Number Unavailable) tone sounds.

# Additional phone features

The following phone features are available on some IP Phone 2001 phones. Contact your system administrator to find out if they are available to you.

- “Using Virtual Office” on page 61
- “Using Media Gateway 1000B” on page 69

## Using Virtual Office

---

When you are away from your office telephone, use the Virtual Office feature to transfer calls and all of your telephone's features to a remote telephone.

**Note 1:** Consult your system administrator to verify if the Virtual Office feature is available for your use.

**Note 2:** When designated as the office telephone, the IP Phone 2001 can be activated for Virtual Office by the IP Phone 2002, IP Phone 2004, IP Softphone 2050, or another IP Phone 2001.

**Note 3:** When used as the remote telephone, the IP Phone 2001 can activate **only an IP Phone 2001** for Virtual Office.

This section provides more information on the following topics:

 
- “Logging in to Virtual Office” on page 62
- “Using Virtual Office on your remote telephone” on page 63
- “Using Virtual Office on your office telephone” on page 65
- “Logging out of Virtual Office” on page 66
- “Troubleshooting Virtual Office” on page 67

## Logging in to Virtual Office

To activate Virtual Office on your office telephone from your remote telephone:



1. Press the **Services** key.



2. Press the **Navigation** keys to scroll and highlight **Virtual Office Login**.

Select



3. Press the **Select** soft key.



4. Enter your User ID (for example, your DN including the access code) at the prompt.

**Note:** This must be an ESN number.

Select



5. Press the **Select** soft key.



6. At the prompt, enter the home **Station Control Password (SCPW)**.

**Note 1:** If the User ID is not found locally, the message “Locating Remote Server” displays.

**Note 2:** After three failed login attempts, wait one hour before attempting to log in again.


A successful login transfers all the features, time, date, and tones to your remote telephone from your office telephone.

## Using Virtual Office on your remote telephone

---

**Figures 5 to 8** illustrate IP Phones logged on to an IP Phone 2001 using Virtual Office.

**Figure 5: Logged on to an IP Phone 2001 using an IP Phone 2001**

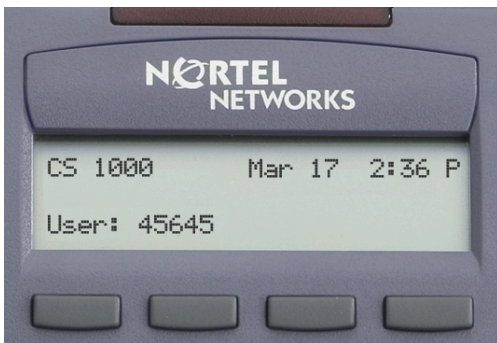 

**Figure 6: Logged on to an IP Phone 2001 using an IP Phone 2002**

 


**Figure 7: Logged on to an IP Phone 2001 using an IP Phone 2004**






**Figure 8: Logged on to an IP Phone 2001 using an IP Softphone 2050**

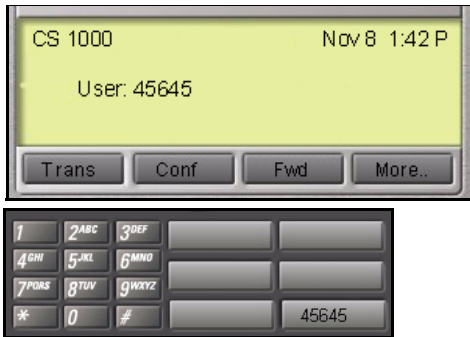

On the displays of IP Phone 2002 and 2004, and IP Softphone 2050, the feature keys remain empty (except for the appearance of your DN) as your IP Phone 2001 does not support feature keys.

A User information line appears on all displays listing the number of your office telephone.
 
## Using Virtual Office on your office telephone

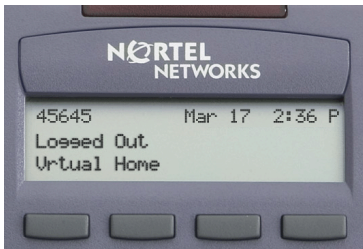

When activated for Virtual Office by a remote telephone, your office telephone is *logged out* and is no longer operational.

A Logged Out message displays on your telephone alerting you that your office telephone is being used for Virtual Office.

### To regain operation of a telephone being used for Virtual Office:

Home



or



Virtual



Choose one of the following:

1. To completely disconnect your office telephone from the remote telephone:
  - a. Press the **Home** soft key.
  - b. Enter your User ID and password (this logs the office telephone back on to your office network).
2. To use your office telephone as the remote telephone for Virtual Office, press the **Virtual** soft key to log in to another IP Phone.

## Logging out of Virtual Office

### To log out from a remote telephone:



(Services)



Select



1. Press the **Services** key.
2. Press the **Navigation** keys to scroll and highlight **Virtual Office Logout**.
3. Press the **Select** soft key.

## Troubleshooting Virtual Office

Virtual Office can display error messages on-screen. The following table lists error messages and actions to correct the causes.

**Table 1: Troubleshooting Virtual Office (Part 1 of 3)**

Displayed Message	Probable Cause	Action
Busy, try again	Remote IP Phone is active (not idle).	Wait for remote telephone to become idle and try again.
	ACD IP Phone is logged in.	Log out of ACD IP Phone before initiating Virtual Office from another IP Phone.
	Make-Set-Busy is inactive on ACD IP Phone.	Configure Make-Set-Busy active on ACD IP Phone.
Invalid ID (1)	Incorrect User ID entered.	Enter correct User ID.
	User ID is not in Gatekeeper database.	Notify system administrator.
Invalid ID (2)	Incorrect User ID entered.	Enter correct User ID.
Invalid ID (3)	Incorrect User ID entered.	Enter correct User ID.
	User ID in Gatekeeper database points to originating Call Server.	Notify system administrator.

**Table 1: Troubleshooting Virtual Office (Part 2 of 3)**

Displayed Message	Probable Cause	Action
Locked from Login	Three failed attempts to enter the correct Station Control Password.	Wait one hour for the lock to clear automatically, or notify system administrator to clear lock.
Permission Denied (1)	Remote telephone has no Station Control Password.	Notify system administrator.
Permission Denied (3)	Incorrect User ID entered.	Enter correct User ID.
	Remote telephone has no Station Control Password.	Notify system administrator.
Permission Denied (4)	Incorrect User ID entered.	Enter correct User ID.
	Attempt to log in to a remote IP Phone 2002, IP Phone 2004, or IP Softphone 2050 from an IP Phone 2001 (some restrictions apply).	Go to an IP Phone 2002, IP Phone 2004, or IP Softphone 2050 and try to log in again, or consult your system administrator.
Permission Denied (5)	Incorrect User ID entered.	Enter correct User ID.
	Remote telephone does not have VOUA Class of Service.	Notify system administrator.

**Table 1: Troubleshooting Virtual Office (Part 3 of 3)**

Displayed Message	Probable Cause	Action
Permission Denied (6)	Incorrect User ID entered.	Enter correct User ID.
	Incorrect Station Control Password entered.	Select Retry, and try again with the correct Station Control Password.
Server Unreachable (1)	Network problem.	Notify system administrator if problem persists.
Server Unreachable (2)	Network problem.	Notify system administrator if problem persists.

## Using Media Gateway 1000B

This section provides more information on the following topics:

- “Using Test Local Mode” on page 70
- “Using Resume Normal Mode” on page 70
- “Troubleshooting MG 1000B” on page 71

The Media Gateway 1000B (MG 1000B) telephone can operate in Normal or Local Mode.

### Normal Mode

The telephone registers with the Main Office and receives telephone services from the Main Office. At any time during Normal Mode, you can check local mode functionality (make and receive calls) by enabling Local Mode and returning to Normal Mode. After testing, you can return to Normal Mode by using the **Resume Normal Mode** command or by waiting for 10 minutes.

### Local Mode

If the WAN connection goes down, the telephone loses communication with the Main Office TPS. It then registers with the MG 1000B and receives telephone services from the branch office. When in Local Mode, the telephone displays “LOCAL MODE.”

### Using Test Local Mode

Use Test Local Mode to check local mode functionality (make and receive telephone calls). This is useful when provisioning has changed for an IP Phone on an MG 1000B Controller.



1. Press the **Services** key.



2. Press the **Navigation** keys to scroll and highlight **Test Local Mode**.



3. Press the **Select** soft key (the telephone resets and registers to the MG 1000B).

 
### Using Resume Normal Mode

Use the Resume Normal Mode command to return to Normal Mode after testing survival functionality.

**Note:** If the Resume Normal Mode command is not performed after testing, the telephone automatically returns to Normal Mode in ten minutes.



1. Press the **Services** key to access the Services menu.



- Using the **Navigation** keys, highlight **Resume Normal Mode**.

Select



- Press the **Select** key (the telephone registers back to the Main Office).

## Troubleshooting MG 1000B

MG 1000B can display error messages on-screen. The following table lists error messages and actions to correct the causes.

**Table 2: Troubleshooting MG 1000B**

Display Message	Probable Cause	Action
Local Mode	Test Local mode.	Press the <b>Services</b> key, and then select <b>Resume Normal Mode</b> .
	Network problem.	Contact system administrator if problem persists.
Local Mode Invalid ID (1)	Gatekeeper unable to find endpoint from Branch User ID.	Notify system administrator.
Local Mode Invalid ID (2)	Branch User ID not found in any equipped Terminal Number (TN).	Notify system administrator.

# Using Hospitality features

Use the following Hospitality features for hotel operations.

## Configuring Automatic Wake-Up

Use the Automatic Wake-Up feature to receive a timed reminder call. From your telephone, you can program the system to automatically place a call to yourself at a predetermined time. When you answer the call, recorded music plays for up to 30 seconds, followed by a prerecorded announcement or the attendant.

**To enter the time for an Automatic Wake-Up call:**



1. Lift the handset.



2. Dial the **Automatic Wake-Up Request** FFC.



3. Dial the **Automatic Wake-Up** time in a 24-hour time format (hhmm). A tone sounds to confirm the time.

**Note:** In a 24-hour time format, 7:30 a.m. is entered as 0730; 9:45 p.m. is entered as 2145.



(Goodbye)

4. Press the **Goodbye** key.



### To quit an Automatic Wake-Up call:



1. Lift the handset.



 
2. Dial the **Automatic Wake-Up Quit** FFC.



(Goodbye)

3. Press the **Goodbye** key.

### To verify the time for the Automatic Wake-Up call:



1. Lift the handset.



2. Dial the **Automatic Wake-Up Verify** FFC.



3. Dial the **Automatic Wake-Up** time in a 24-hour time format (hhmm). If your query matches the preset time, a confirmation tone sounds.

**Note:** In a 24-hour time format, 7:30 a.m. is entered as 0730; 9:45 p.m. is entered as 2145.



(Goodbye)

4. Press the **Goodbye** key.

# Using External Server Applications

Use External Server Applications to access a variety of applications directly from your IP Phone 2001. For more information about the External Server Applications, consult the *Nortel IP Phone External Server Applications User Guide*.

# Flexible Feature Codes (FFCs)

Use this table to keep track of the FFCs assigned by your system administrator.

**Table 3: FFCs**

FFC	Feature	FFC	Feature
	Automatic Wake-Up Activate		Malicious Call Trace
	Automatic Wake-Up Deactivate		Pickup Ringing Number
	Automatic Wake-Up Verify		Remote Call Forward Activate
	Call Detail Recording Charge Account		Remote Call Forward Deactivate
	Electronic Lock Activate		Radio Paging Access
	Electronic Lock Deactivate		Radio Paging Answer
	Group Call		Station Control Password Change
	Internal Call Forward Activate		Virtual Office Terminal Log On
	Internal Call Forward Deactivate		Virtual Office Terminal Log Off



# Terms you should know

## Attendant

A telephone operator in your organization.

## Calling Party Name Display

Information appearing on the LCD display screen such as the caller's name and telephone number. The system must have CPND enabled.

## Category 5 (Cat5)

Balanced 100 Ohm cable and associated connecting hardware whose transmission characteristics are specified up to 100 MHz. It is used by 10BaseT, 100BaseT4, and 100BaseTX installations. The cable normally has four pairs of copper wire. Category 5 is the most popular cable used in new installations today.

## Communication Server 1000

Your office communication system.

## Date/time display

The current date and time when the telephone is in an idle state.

## Directory Number (DN)

A number consisting of one to seven digits for a telephone. Also known as an *extension number*.

## Fastbusy

A signal given to indicate that all outgoing lines are busy or an error condition exists (for example, a misdialed number).

## Feature display

An area that shows status information about the feature in use. It also displays the name and status of the active session.

### **Fixed key**

The hard-labeled keys on your telephone.

### **Flexible Feature Codes (FFCs)**

Specialized codes entered using the dialpad that enable features (for example, Ring Again).

### **Goodbye key**

A fixed key used to end an active call.

### **Indicator**

An LCD or an LED that indicates the status of a feature by the flash, wink, steady on, or off.

### **Information display**

Any display of call activity, lists, prompts, and status of calls. On the IP Phone 2001 this information area is a one-line by 24-characters. If the text message exceeds this area, a scroll arrow icon indicates that you must use the scroll keys to view the remaining text.

### **Information line**

A one-line by 24-character area which displays date and time or application information.

### **Interrupted dial tone**

A broken or pulsed dial tone, heard when you access some features on your telephone.

### **Message (Inbox)**

A fixed key on the IP Phone 2001 that connects to your voice messaging system when the key is pressed.

### **Message waiting indicator/Incoming call indicator**

An LCD or an LED that indicates the status of a feature by the flash, wink, steady on, or off.

### **Navigation keys**

Keys used to scroll through menus and lists appearing on the LCD display screen.

### **Off-hook**

Any line selected to make a call or receive an incoming call. The term *off-hook* is applied whether (a) the end-user lifts up the handset, (b) the end-user presses a line key, (c) the call is automatically answered at the telephone, or (d) a line is automatically selected for an outgoing call.

### **Paging tone**

A special tone heard when using the Radio Paging feature. You hear two beeps followed by dial tone.

### **Ringback/ring tone**

A sound indicating that a call you have made is ringing at its destination.

### **Services key**

A fixed key used to access options such as Telephone Options, Password Admin, Virtual Office Login, Virtual Office Logout, Test Local Mode, and Resume Normal Mode.

### **Shared Directory Number**

A DN (extension) that is shared by two or more persons.

### **Special Prefix code (SPRE)**

Special codes entered using the dialpad, followed by a two-digit access code, that enable features (for example, Call Forward All Calls requires entry of SPRE code + 74).

### Soft keys (self-labeled)

A set of keys programmed by your system administrator. These four keys located directly below the display area have four programmable layers. These keys are also used to configure parameters in the **Telephone Options** menu.

### Special dial tone

The three consecutive tones followed by dial tone that you hear when accessing telephone features.

### Station Control Password (SCPW)

Enables security features on your phone to prevent others from making calls from your telephone and to prevent access to protected features (for example, Remote Call Forward).

### Status Messages

A message displayed to inform the user of important information. A right arrow appears if more than one Status Message is present. Examples of Status Messages include: Message Waiting, All Lines Forwarded to: 6453, Do Not Disturb On, Ring Again active, and Ringer is OFF.

### System or Switch

Your office communication system.

### Switchhook

A button that the handset presses down, disconnecting your call when you replace the handset. The handset (when lifted) releases the switchhook and you either answer an incoming call or you receive a dial tone to make a call.

### User Interface

Screen displays that interact with the end-user as a result of an action or event.



### **Volume control bar**

A rocker bar you press to increase or decrease the volume of the ringer, handset, headset, and the speaker.



# Index

## A

About the IP Phone 2001 9  
 Answer a call 34  
 Attendant 77  
 Automatic Wake-Up 72

## B

Basic features 9

## C

Call features and Flexible Feature Codes 14  
 Call Forward 41  
 Call Page 51  
 Call Page Connect 51  
 Call Park 37  
 Call party information 77  
 Calling Party Number 39  
 Charge a call or charge a forced call 52  
 Conference call 47  
 Contrast adjustment 22

## D

Date/time display 77  
 Date/Time format 23  
 Direct system access 44  
 Directory Number 77  
 DN 77

## E

Electronic Lock 45

Enhanced Override 55  
 External server applications 74

## F

Fastbusy 77  
 Feature display 77  
 Fixed key 78  
 Flexible Feature Code (FFC) 42, 43, 44, 48, 55, 78  
 Flexible Feature Codes (FFCs) 75  
 Forced Camp-on 56  
 Forward key 41

## G

Goodbye key 11, 78  
 Group Call 48

## H

Hold 35  
 Hold key 11  
 Hospitality features 72

## I

Indicator status 78, 79  
 Information display 78  
 Information line 78  
 Internal Call Forward 42  
 Interrupted dial tone 78

## L

Language selection 22  
 Last Number Redial 30

Line key 10

Local DialPad Tone 24

## M

Make Set Busy 50

Malicious call trace 39

Media Gateway 1000B 69

Meet-me page 58

Message key 11, 78

Message waiting indicator 12, 79

## N

Navigation keys 11, 79

## O

Off-hook 79

Off-hook dialing 26

On-hook dialing 27

Override 55

Override a busy signal 57

## P

Page Meet-me code 58

Paging tone 79

Predial feature 28

Privacy Release 57

## R

Radio Page 58

Record a Calling Party Number 39

Remote Call Forward 43

Ring Again 29

Ring type 24

Ringback/ring tone 56, 79

## S

Secure communication 14

Secure your telephone 45

Services key 11, 79

Services menu 19

Shared Directory Numbers 79

Soft keys (self-labeled) 12, 80

Special dial tone 80

Special Prefix code (SPRE) 79

Speed Call 31

Speed Call, System 32

Station Control Password 44

Station Control Password (SCPW)  
80

Status Messages 80

Switchhook 80

System or Switch 80

System Speed Call 32

## T

Telephone controls 10

Telephone display 13

Telephone information 25

Timed Reminder Recall 36

Transfer a call 35

## U

User Interface 80

## V

Virtual Office 61

Virtual Office login 62

Virtual Office logout 66

Virtual Office on your office tele-

phone 65  
Virtual Office on your remote tele-  
phone 63  
Volume adjustment 21  
Volume control bar 10





Nortel Communication Server 1000

# IP Phone 2001

## User Guide

**Copyright © 2006 Nortel Networks. All rights reserved.**

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Nortel, Nortel (Logo), the Globemark, SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

Document Number: NN-10300-048

Document Release: Preliminary 4.08

Date: March 2006

Produced in Canada



[www.nortel.com](http://www.nortel.com)